

6502 Instruction Set

TOC: [Description](#) / [Instructions in Detail](#) / ["Illegal" Opcodes](#) / [Jump Vectors and Stack Operations](#) / [Instruction Layout](#) / [65xx-Family](#)

HI	LO-NIBBLE															
	-0	-1	-2	-3	-4	-5	-6	-7	-8	-9	-A	-B	-C	-D	-E	-F
0-	BRK impl	ORA X,ind				ORA zpg	ASL zpg		PHP impl	ORA #	ASL A			ORA abs	ASL abs	
1-	BPL rel	ORA ind,Y				ORA zpg,X	ASL zpg,X		CLC impl	ORA abs,Y				ORA abs,X	ASL abs,X	
2-	JSR abs	AND X,ind			BIT zpg	AND zpg	ROL zpg		PLP impl	AND #	ROL A		BIT abs	AND abs	ROL abs	
3-	BMI rel	AND ind,Y				AND zpg,X	ROL zpg,X		SEC impl	AND abs,Y				AND abs,X	ROL abs,X	
4-	RTI impl	EOR X,ind				EOR zpg	LSR zpg		PHA impl	EOR #	LSR A		JMP abs	EOR abs	LSR abs	
5-	BVC rel	EOR ind,Y				EOR zpg,X	LSR zpg,X		CLI impl	EOR abs,Y				EOR abs,X	LSR abs,X	
6-	RTS impl	ADC X,ind				ADC zpg	ROR zpg		PLA impl	ADC #	ROR A		JMP ind	ADC abs	ROR abs	
7-	BVS rel	ADC ind,Y				ADC zpg,X	ROR zpg,X		SEI impl	ADC abs,Y				ADC abs,X	ROR abs,X	
8-		STA X,ind			STY zpg	STA zpg	STX zpg		DEY impl		TXA impl		STY abs	STA abs	STX abs	
9-	BCC rel	STA ind,Y			STY zpg,X	STA zpg,X	STX zpg,Y		TYA impl	STA abs,Y	TXS impl			STA abs,X		
A-	LDY #	LDA X,ind	LDX #		LDY zpg	LDA zpg	LDX zpg		TAY impl	LDA #	TAX impl		LDY abs	LDA abs	LDX abs	
B-	BCS rel	LDA ind,Y			LDY zpg,X	LDA zpg,X	LDX zpg,Y		CLV impl	LDA abs,Y	TSX impl		LDY abs,X	LDA abs,X	LDX abs,Y	
C-	CPY #	CMP X,ind			CPY zpg	CMP zpg	DEC zpg		INY impl	CMP #	DEX impl		CPY abs	CMP abs	DEC abs	
D-	BNE rel	CMP ind,Y				CMP zpg,X	DEC zpg,X		CLD impl	CMP abs,Y				CMP abs,X	DEC abs,X	
E-	CPX #	SBC X,ind			CPX zpg	SBC zpg	INC zpg		INX impl	SBC #	NOP impl		CPX abs	SBC abs	INC abs	
F-	BEQ rel	SBC ind,Y				SBC zpg,X	INC zpg,X		SED impl	SBC abs,Y				SBC abs,X	INC abs,X	

show illegal opcodes

Description

Address Modes

A Accumulator	OPC A	<i>operand is AC (implied single byte instruction)</i>
abs absolute	OPC \$LLHH	<i>operand is address \$HLLL *</i>
abs,X absolute, X-indexed	OPC \$LLHH,X	<i>operand is address; effective address is address incremented by X with carry **</i>
abs,Y absolute, Y-indexed	OPC \$LLHH,Y	<i>operand is address; effective address is address incremented by Y with carry **</i>
# immediate	OPC #\$BB	<i>operand is byte BB</i>

impl implied	OPC	<i>operand implied</i>
ind indirect	OPC (\$LLHH)	<i>operand is address; effective address is contents of word at address: C.w(\$HLLL)</i>
X,ind X-indexed, indirect	OPC (\$LL,X)	<i>operand is zeropage address; effective address is word in (LL + X, LL + X + 1), inc. without carry: C.w(\$00LL + X)</i>
ind,Y indirect, Y-indexed	OPC (\$LL),Y	<i>operand is zeropage address; effective address is word in (LL, LL + 1) incremented by Y with carry: C.w(\$00LL) + Y</i>
rel relative	OPC \$BB	<i>branch target is PC + signed offset BB ***</i>
zpg zeropage	OPC \$LL	<i>operand is zeropage address (hi-byte is zero, address = \$00LL)</i>
zpg,X zeropage, X-indexed	OPC \$LL,X	<i>operand is zeropage address; effective address is address incremented by X without carry **</i>
zpg,Y zeropage, Y-indexed	OPC \$LL,Y	<i>operand is zeropage address; effective address is address incremented by Y without carry **</i>

* 16-bit address words are little endian, lo(w)-byte first, followed by the hi(gh)-byte.
(An assembler will use a human readable, big-endian notation as in \$HLLL.)

** The available 16-bit address space is conceived as consisting of pages of 256 bytes each, with address hi-bytes representing the page index. An increment with carry may affect the hi-byte and may thus result in a crossing of page boundaries, adding an extra cycle to the execution. Increments without carry do not affect the hi-byte of an address and no page transitions do occur. Generally, increments of 16-bit addresses include a carry, increments of zeropage addresses don't. Notably this is not related in any way to the state of the carry bit of the accumulator.

*** Branch offsets are signed 8-bit values, -128 ... +127, negative offsets in two's complement. Page transitions may occur and add an extra cycle to the execution.

Instructions by Name

[ADC](#) add with carry
[AND](#) and (with accumulator)
[ASL](#) arithmetic shift left
[BCC](#) branch on carry clear
[BCS](#) branch on carry set
[BEQ](#) branch on equal (zero set)
[BIT](#) bit test
[BMI](#) branch on minus (negative set)
[BNE](#) branch on not equal (zero clear)
[BPL](#) branch on plus (negative clear)
[BRK](#) break / interrupt
[BVC](#) branch on overflow clear
[BVS](#) branch on overflow set
[CLC](#) clear carry
[CLD](#) clear decimal
[CLI](#) clear interrupt disable
[CLV](#) clear overflow
[CMP](#) compare (with accumulator)

[CPX](#) compare with X
[CPY](#) compare with Y
[DEC](#) decrement
[DEX](#) decrement X
[DEY](#) decrement Y
[EOR](#) exclusive or (with accumulator)
[INC](#) increment
[INX](#) increment X
[INY](#) increment Y
[JMP](#) jump
[JSR](#) jump subroutine
[LDA](#) load accumulator
[LDX](#) load X
[LDY](#) load Y
[LSR](#) logical shift right
[NOP](#) no operation
[ORA](#) or with accumulator
[PHA](#) push accumulator
[PHP](#) push processor status (SR)
[PLA](#) pull accumulator
[PLP](#) pull processor status (SR)
[ROL](#) rotate left
[ROR](#) rotate right
[RTI](#) return from interrupt
[RTS](#) return from subroutine
[SBC](#) subtract with carry
[SEC](#) set carry
[SED](#) set decimal
[SEI](#) set interrupt disable
[STA](#) store accumulator
[STX](#) store X
[STY](#) store Y
[TAX](#) transfer accumulator to X
[TAY](#) transfer accumulator to Y
[TSX](#) transfer stack pointer to X
[TXA](#) transfer X to accumulator
[TXS](#) transfer X to stack pointer
[TYA](#) transfer Y to accumulator

Registers

PC program counter (16 bit)
AC accumulator (8 bit)
X X register (8 bit)
Y Y register (8 bit)
SR status register [NV-BDIZC] (8 bit)
SP stack pointer (8 bit)

Note: The status register (SR) is also known as the P register.

SR Flags (bit 7 to bit 0)

N Negative
V Overflow
- ignored
B Break
D Decimal (use BCD for arithmetics)
I Interrupt (IRQ disable)
Z Zero
C Carry

Note: The break flag is not an actual flag implemented in a register, and rather appears only, when the status register is pushed onto or pulled from the stack. When pushed, it will be 1 when transferred by a BRK or PHP instruction, and zero otherwise (i.e., when pushed by a hardware interrupt). When pulled into the status register (by PLP or on RTI), it will be ignored.

In other words, the break flag will be inserted, whenever the status register is transferred to the stack by software (BRK or PHP), and will be zero, when transferred by hardware. Since there is no actual slot for the break flag, it will be always ignored, when retrieved (PLP or RTI). The break flag is not accessed by the CPU at anytime and there is no internal representation. Its purpose is more for patching, to discern an interrupt caused by a BRK instruction from a normal interrupt initiated by hardware.

Processor Stack

LIFO, top down, 8 bit range, 0x0100 - 0x01FF

Bytes, Words, Addressing

8 bit bytes, 16 bit words in lobyte-hibyte representation (Little-Endian).
16 bit address range, operands follow instruction codes.

Signed values are two's complement, sign in bit 7 (most significant bit).
 (%11111111 = \$FF = -1, %10000000 = \$80 = -128, %01111111 = \$7F = +127)

Vendor

MOS Technology, 1975



Image: [Wikimedia Commons](#).

6502 Instructions in Detail

ADC Add Memory to Accumulator with Carry

A + M + C -> A, C N Z C I D V
 + + + - - +

addressing	assembler	opc	bytes	cycles
immediate	ADC #oper	69	2	2
zeropage	ADC oper	65	2	3
zeropage,X	ADC oper,X	75	2	4
absolute	ADC oper	6D	3	4
absolute,X	ADC oper,X	7D	3	4*
absolute,Y	ADC oper,Y	79	3	4*
(indirect,X)	ADC (oper,X)	61	2	6
(indirect),Y	ADC (oper),Y	71	2	5*

AND AND Memory with Accumulator

A AND M -> A N Z C I D V
 + + - - - -

addressing	assembler	opc	bytes	cycles
immediate	AND #oper	29	2	2
zeropage	AND oper	25	2	3
zeropage,X	AND oper,X	35	2	4
absolute	AND oper	2D	3	4
absolute,X	AND oper,X	3D	3	4*
absolute,Y	AND oper,Y	39	3	4*
(indirect,X)	AND (oper,X)	21	2	6

(indirect),Y AND (oper),Y 31 2 5*

ASL Shift Left One Bit (Memory or Accumulator)

C <- [76543210] <- 0 N Z C I D V
+ + + - - -

addressing	assembler	opc	bytes	cycles
accumulator	ASL A	0A	1	2
zeropage	ASL oper	06	2	5
zeropage,X	ASL oper,X	16	2	6
absolute	ASL oper	0E	3	6
absolute,X	ASL oper,X	1E	3	7

BCC Branch on Carry Clear

branch on C = 0 N Z C I D V
- - - - -

addressing	assembler	opc	bytes	cycles
relative	BCC oper	90	2	2**

BCS Branch on Carry Set

branch on C = 1 N Z C I D V
- - - - -

addressing	assembler	opc	bytes	cycles
relative	BCS oper	B0	2	2**

BEQ Branch on Result Zero

branch on Z = 1 N Z C I D V
- - - - -

addressing	assembler	opc	bytes	cycles
relative	BEQ oper	F0	2	2**

BIT Test Bits in Memory with Accumulator

bits 7 and 6 of operand are transferred to bit 7 and 6 of SR (N,V);
the zero-flag is set to the result of operand AND accumulator.

A AND M, M7 -> N, M6 -> V N Z C I D V
M7 + - - - M6

addressing	assembler	opc	bytes	cycles
zeropage	BIT oper	24	2	3
absolute	BIT oper	2C	3	4

BMI Branch on Result Minus

```
branch on N = 1           N Z C I D V
                        - - - - -
```

addressing	assembler	opc	bytes	cycles
relative	BMI oper	30	2	2**

BNE Branch on Result not Zero

```
branch on Z = 0           N Z C I D V
                        - - - - -
```

addressing	assembler	opc	bytes	cycles
relative	BNE oper	D0	2	2**

BPL Branch on Result Plus

```
branch on N = 0           N Z C I D V
                        - - - - -
```

addressing	assembler	opc	bytes	cycles
relative	BPL oper	10	2	2**

BRK Force Break

BRK initiates a software interrupt similar to a hardware interrupt (IRQ). The return address pushed to the stack is PC+2, providing an extra byte of spacing for a break mark (identifying a reason for the break.)

The status register will be pushed to the stack with the break flag set to 1. However, when retrieved during RTI or by a PLP instruction, the break flag will be ignored.

The interrupt disable flag is not set automatically.

```
interrupt,                N Z C I D V
push PC+2, push SR        - - - 1 - -
```

addressing	assembler	opc	bytes	cycles
implied	BRK 00	1	1	7

BVC Branch on Overflow Clear

```
branch on V = 0           N Z C I D V
                        - - - - -
```

addressing	assembler	opc	bytes	cycles
relative	BVC oper	50	2	2**

BVS Branch on Overflow Set

```
branch on V = 1          N Z C I D V
                        - - - - -
```

addressing	assembler	opc	bytes	cycles
relative	BVC oper	70	2	2**

CLC Clear Carry Flag

```
0 -> C                  N Z C I D V
                        - - 0 - - -
```

addressing	assembler	opc	bytes	cycles
implied	CLC	18	1	2

CLD Clear Decimal Mode

```
0 -> D                  N Z C I D V
                        - - - - 0 -
```

addressing	assembler	opc	bytes	cycles
implied	CLD	D8	1	2

CLI Clear Interrupt Disable Bit

```
0 -> I                  N Z C I D V
                        - - - 0 - -
```

addressing	assembler	opc	bytes	cycles
implied	CLI	58	1	2

CLV Clear Overflow Flag

```
0 -> V                  N Z C I D V
                        - - - - - 0
```

addressing	assembler	opc	bytes	cycles
implied	CLV	B8	1	2

CMP Compare Memory with Accumulator

```
A - M                  N Z C I D V
                        + + + - - -
```

addressing	assembler	opc	bytes	cycles
immediate	CMP #oper	C9	2	2
zeropage	CMP oper	C5	2	3
zeropage,X	CMP oper,X	D5	2	4
absolute	CMP oper	CD	3	4
absolute,X	CMP oper,X	DD	3	4*
absolute,Y	CMP oper,Y	D9	3	4*


```
(indirect,X)  CMP (oper,X)  C1   2   6
(indirect),Y  CMP (oper),Y  D1   2   5*
```

CPX Compare Memory and Index X

```
X - M                               N Z C I D V
                                   + + + - - -
```

addressing	assembler	opc	bytes	cycles
immediate	CPX #oper	E0	2	2
zeropage	CPX oper	E4	2	3
absolute	CPX oper	EC	3	4

CPY Compare Memory and Index Y

```
Y - M                               N Z C I D V
                                   + + + - - -
```

addressing	assembler	opc	bytes	cycles
immediate	CPY #oper	C0	2	2
zeropage	CPY oper	C4	2	3
absolute	CPY oper	CC	3	4

DEC Decrement Memory by One

```
M - 1 -> M                          N Z C I D V
                                   + + - - - -
```

addressing	assembler	opc	bytes	cycles
zeropage	DEC oper	C6	2	5
zeropage,X	DEC oper,X	D6	2	6
absolute	DEC oper	CE	3	6
absolute,X	DEC oper,X	DE	3	7

DEX Decrement Index X by One

```
X - 1 -> X                          N Z C I D V
                                   + + - - - -
```

addressing	assembler	opc	bytes	cycles
implied	DEX	CA	1	2

DEY Decrement Index Y by One

```
Y - 1 -> Y                          N Z C I D V
                                   + + - - - -
```

addressing	assembler	opc	bytes	cycles
implied	DEY	88	1	2

EOR Exclusive-OR Memory with Accumulator

```
A EOR M -> A                N Z C I D V
                             + + - - - -
```

addressing	assembler	opc	bytes	cycles
immediate	EOR #oper	49	2	2
zeropage	EOR oper	45	2	3
zeropage,X	EOR oper,X	55	2	4
absolute	EOR oper	4D	3	4
absolute,X	EOR oper,X	5D	3	4*
absolute,Y	EOR oper,Y	59	3	4*
(indirect,X)	EOR (oper,X)	41	2	6
(indirect),Y	EOR (oper),Y	51	2	5*

INC Increment Memory by One

```
M + 1 -> M                N Z C I D V
                             + + - - - -
```

addressing	assembler	opc	bytes	cycles
zeropage	INC oper	E6	2	5
zeropage,X	INC oper,X	F6	2	6
absolute	INC oper	EE	3	6
absolute,X	INC oper,X	FE	3	7

INX Increment Index X by One

```
X + 1 -> X                N Z C I D V
                             + + - - - -
```

addressing	assembler	opc	bytes	cycles
implied	INX	E8	1	2

INY Increment Index Y by One

```
Y + 1 -> Y                N Z C I D V
                             + + - - - -
```

addressing	assembler	opc	bytes	cycles
implied	INY	C8	1	2

JMP Jump to New Location

```
(PC+1) -> PCL             N Z C I D V
(PC+2) -> PCH             - - - - -
```

addressing	assembler	opc	bytes	cycles
absolute	JMP oper	4C	3	3
indirect	JMP (oper)	6C	3	5

JSR Jump to New Location Saving Return Address

```

push (PC+2),          N Z C I D V
(PC+1) -> PCL        - - - - -
(PC+2) -> PCH

```

addressing	assembler	opc	bytes	cycles
absolute	JSR oper	20	3	6

LDA Load Accumulator with Memory

```

M -> A              N Z C I D V
                   + + - - -

```

addressing	assembler	opc	bytes	cycles
immediate	LDA #oper	A9	2	2
zeropage	LDA oper	A5	2	3
zeropage,X	LDA oper,X	B5	2	4
absolute	LDA oper	AD	3	4
absolute,X	LDA oper,X	BD	3	4*
absolute,Y	LDA oper,Y	B9	3	4*
(indirect,X)	LDA (oper,X)	A1	2	6
(indirect),Y	LDA (oper),Y	B1	2	5*

LDX Load Index X with Memory

```

M -> X              N Z C I D V
                   + + - - -

```

addressing	assembler	opc	bytes	cycles
immediate	LDX #oper	A2	2	2
zeropage	LDX oper	A6	2	3
zeropage,Y	LDX oper,Y	B6	2	4
absolute	LDX oper	AE	3	4
absolute,Y	LDX oper,Y	BE	3	4*

LDY Load Index Y with Memory

```

M -> Y              N Z C I D V
                   + + - - -

```

addressing	assembler	opc	bytes	cycles
immediate	LDY #oper	A0	2	2
zeropage	LDY oper	A4	2	3
zeropage,X	LDY oper,X	B4	2	4
absolute	LDY oper	AC	3	4
absolute,X	LDY oper,X	BC	3	4*

LSR Shift One Bit Right (Memory or Accumulator)

```

0 -> [76543210] -> C      N Z C I D V

```

0 + + - - -

addressing	assembler	opc	bytes	cycles
accumulator	LSR A	4A	1	2
zeropage	LSR oper	46	2	5
zeropage,X	LSR oper,X	56	2	6
absolute	LSR oper	4E	3	6
absolute,X	LSR oper,X	5E	3	7

NOP No Operation

```

---
                                N Z C I D V
                                - - - - -

```

addressing	assembler	opc	bytes	cycles
implied	NOP	EA	1	2

ORA OR Memory with Accumulator

```

A OR M -> A
                                N Z C I D V
                                + + - - - -

```

addressing	assembler	opc	bytes	cycles
immediate	ORA #oper	09	2	2
zeropage	ORA oper	05	2	3
zeropage,X	ORA oper,X	15	2	4
absolute	ORA oper	0D	3	4
absolute,X	ORA oper,X	1D	3	4*
absolute,Y	ORA oper,Y	19	3	4*
(indirect,X)	ORA (oper,X)	01	2	6
(indirect),Y	ORA (oper),Y	11	2	5*

PHA Push Accumulator on Stack

```

push A
                                N Z C I D V
                                - - - - -

```

addressing	assembler	opc	bytes	cycles
implied	PHA	48	1	3

PHP Push Processor Status on Stack

The status register will be pushed with the break flag and bit 5 set to 1.

```

push SR
                                N Z C I D V
                                - - - - -

```

addressing	assembler	opc	bytes	cycles
implied	PHP	08	1	3

PLA Pull Accumulator from Stack

```
pull A                N Z C I D V
                    + + - - -
```

addressing	assembler	opc	bytes	cycles
implied	PLA	68	1	4

PLP Pull Processor Status from Stack

The status register will be pulled with the break flag and bit 5 ignored.

```
pull SR              N Z C I D V
                    from stack
```

addressing	assembler	opc	bytes	cycles
implied	PLP	28	1	4

ROL Rotate One Bit Left (Memory or Accumulator)

```
C <- [76543210] <- C    N Z C I D V
                    + + + - -
```

addressing	assembler	opc	bytes	cycles
accumulator	ROL A	2A	1	2
zeropage	ROL oper	26	2	5
zeropage,X	ROL oper,X	36	2	6
absolute	ROL oper	2E	3	6
absolute,X	ROL oper,X	3E	3	7

ROR Rotate One Bit Right (Memory or Accumulator)

```
C -> [76543210] -> C    N Z C I D V
                    + + + - -
```

addressing	assembler	opc	bytes	cycles
accumulator	ROR A	6A	1	2
zeropage	ROR oper	66	2	5
zeropage,X	ROR oper,X	76	2	6
absolute	ROR oper	6E	3	6
absolute,X	ROR oper,X	7E	3	7

RTI Return from Interrupt

The status register is pulled with the break flag and bit 5 ignored. Then PC is pulled from the stack.

```
pull SR, pull PC      N Z C I D V
                    from stack
```

addressing	assembler	opc	bytes	cycles
implied	RTI	40	1	6

RTS Return from Subroutine

pull PC, PC+1 -> PC			N Z C I D V	
			- - - - -	

addressing	assembler	opc	bytes	cycles
implied	RTS	60	1	6

SBC Subtract Memory from Accumulator with Borrow

A - M - \bar{C} -> A			N Z C I D V	
			+ + + - - +	

addressing	assembler	opc	bytes	cycles
immediate	SBC #oper	E9	2	2
zeropage	SBC oper	E5	2	3
zeropage,X	SBC oper,X	F5	2	4
absolute	SBC oper	ED	3	4
absolute,X	SBC oper,X	FD	3	4*
absolute,Y	SBC oper,Y	F9	3	4*
(indirect,X)	SBC (oper,X)	E1	2	6
(indirect),Y	SBC (oper),Y	F1	2	5*

SEC Set Carry Flag

1 -> C			N Z C I D V	
			- - 1 - - -	

addressing	assembler	opc	bytes	cycles
implied	SEC	38	1	2

SED Set Decimal Flag

1 -> D			N Z C I D V	
			- - - - 1 -	

addressing	assembler	opc	bytes	cycles
implied	SED	F8	1	2

SEI Set Interrupt Disable Status

1 -> I			N Z C I D V	
			- - - 1 - -	

addressing	assembler	opc	bytes	cycles
implied	SEI	78	1	2

TSX Transfer Stack Pointer to Index X

SP -> X N Z C I D V
 + + - - - -

addressing	assembler	opc	bytes	cycles
implied	TSX	BA	1	2

TXA Transfer Index X to Accumulator

X -> A N Z C I D V
 + + - - - -

addressing	assembler	opc	bytes	cycles
implied	TXA	8A	1	2

TXS Transfer Index X to Stack Register

X -> SP N Z C I D V
 - - - - - -

addressing	assembler	opc	bytes	cycles
implied	TXS	9A	1	2

TYA Transfer Index Y to Accumulator

Y -> A N Z C I D V
 + + - - - -

addressing	assembler	opc	bytes	cycles
implied	TYA	98	1	2

- * add 1 to cycles if page boundary is crossed
- ** add 1 to cycles if branch occurs on same page
- add 2 to cycles if branch occurs to different page

Legend to Flags: + modified
 - not modified
 1 set
 0 cleared
 M6 memory bit 6
 M7 memory bit 7

Note on assembler syntax:

Some assemblers employ "OPC *oper" or a ".b" extension to the mnemonic for forced zeropage addressing.

"Illegal" Opcodes and Undocumented Instructions

The following instructions are undocumented are not guaranteed to work. Some are highly unstable, some may even start two asynchronous threads competing in race condition with the winner determined by such miniscule factors as temperature or minor differences in the production series, at other times, the outcome depends on the exact values involved and the chip series.

Use with care and at your own risk.

There are several mnemonics for various opcodes. Here, they are (mostly) the same as those used by the ACME and DASM assemblers with known synonyms provided in parentheses:

- [ALR](#) (ASR)
- [ANC](#)
- [ANC](#) (ANC2)
- [ANE](#) (XAA)
- [ARR](#)
- [DCP](#) (DCM)
- [ISC](#) (ISB, INS)
- [LAS](#) (LAR)
- [LAX](#)
- [LXA](#) (LAX immediate)
- [RLA](#)
- [RRA](#)
- [SAX](#) (AXS, AAX)
- [SBX](#) (AXS, SAX)
- [SHA](#) (AHX, AXA)
- [SHX](#) (A11, SXA, XAS)
- [SHY](#) (A11, SYA, SAY)
- [SLO](#) (ASO)
- [SRE](#) (LSE)
- [TAS](#) (XAS, SHS)
- [USBC](#) (SBC)
- [NOPs](#) (including DOP, TOP)
- [JAM](#) (KIL, HLT)

"Illegal" Opcodes in Details

Legend to markers used in the instruction details:

- * add 1 to cycles if page boundary is crossed

† unstable
 †† highly unstable

ALR (ASR)

AND oper + LSR

A AND oper, 0 -> [76543210] -> C

N Z C I D V
 + + + - - -

addressing	assembler	opc	bytes	cycles
immediate	ALR #oper	4B	2	2

ANC

AND oper + set C as ASL

A AND oper, bit(7) -> C

N Z C I D V
 + + + - - -

addressing	assembler	opc	bytes	cycles
immediate	ANC #oper	0B	2	2

ANC (ANC2)

AND oper + set C as ROL

effectively the same as instr. 0B

A AND oper, bit(7) -> C

N Z C I D V
 + + + - - -

addressing	assembler	opc	bytes	cycles
immediate	ANC #oper	2B	2	2

ANE (XAA)

* AND X + AND oper

Highly unstable, do not use.

A base value in A is determined based on the contents of A and a constant, which may be typically \$00, \$ff, \$ee, etc. The value of this constant depends on temperature, the chip series, and maybe other factors, as well.

In order to eliminate these uncertainties from the equation, use either 0 as the operand or a value of \$FF in the accumulator.

(A OR CONST) AND X AND oper -> A

N Z C I D V
+ + - - -

addressing	assembler	opc	bytes	cycles
immediate	ANE #oper	8B	2	2 ††

ARR

AND oper + ROR

This operation involves the adder:

V-flag is set according to (A AND oper) + oper

The carry is not set, but bit 7 (sign) is exchanged with the carry

A AND oper, C -> [76543210] -> C

N Z C I D V
+ + + - - +

addressing	assembler	opc	bytes	cycles
immediate	ARR #oper	6B	2	2

DCP (DCM)

DEC oper + CMP oper

M - 1 -> M, A - M

N Z C I D V
+ + + - - -

addressing	assembler	opc	bytes	cycles
zeropage	DCP oper	C7	2	5
zeropage,X	DCP oper,X	D7	2	6
absolute	DCP oper	CF	3	6
absolut,X	DCP oper,X	DF	3	7
absolut,Y	DCP oper,Y	DB	3	7
(indirect,X)	DCP (oper,X)	C3	2	8
(indirect),Y	DCP (oper),Y	D3	2	8

ISC (ISB, INS)

INC oper + SBC oper

M + 1 -> M, A - M - \bar{C} -> A

N Z C I D V
+ + + - - +

addressing	assembler	opc	bytes	cycles
zeropage	ISC oper	E7	2	5
zeropage,X	ISC oper,X	F7	2	6
absolute	ISC oper	EF	3	6
absolut,X	ISC oper,X	FF	3	7
absolut,Y	ISC oper,Y	FB	3	7

```
(indirect,X) ISC (oper,X) E3 2 8
(indirect),Y ISC (oper),Y F3 2 4
```

LAS (LAR)

LDA/TSX oper

M AND SP -> A, X, SP

```
N Z C I D V
+ + - - -
```

addressing	assembler	opc	bytes	cycles
absolut,Y	LAS oper,Y	BB	3	4*

LAX

LDA oper + LDX oper

M -> A -> X

```
N Z C I D V
+ + - - -
```

addressing	assembler	opc	bytes	cycles
zeropage	LAX oper	A7	2	3
zeropage,Y	LAX oper,Y	B7	2	4
absolute	LAX oper	AF	3	4
absolut,Y	LAX oper,Y	BF	3	4*
(indirect,X)	LAX (oper,X)	A3	2	6
(indirect),Y	LAX (oper),Y	B3	2	5*

LXA (LAX immediate)

Store * AND oper in A and X

Highly unstable, involves a 'magic' constant, see ANE

(A OR CONST) AND oper -> A -> X

```
N Z C I D V
+ + - - -
```

addressing	assembler	opc	bytes	cycles
immediate	LXA #oper	AB	2	2 ††

RLA

ROL oper + AND oper

M = C <- [76543210] <- C, A AND M -> A

```
N Z C I D V
+ + + - -
```

addressing	assembler	opc	bytes	cycles
zeropage	RLA oper	27	2	5

zeropage,X	RLA oper,X	37	2	6
absolute	RLA oper	2F	3	6
absolut,X	RLA oper,X	3F	3	7
absolut,Y	RLA oper,Y	3B	3	7
(indirect,X)	RLA (oper,X)	23	2	8
(indirect),Y	RLA (oper),Y	33	2	8

RRA

ROR oper + ADC oper

M = C -> [76543210] -> C, A + M + C -> A, C

N Z C I D V
+ + + - - +

addressing	assembler	opc	bytes	cycles
zeropage	RRA oper	67	2	5
zeropage,X	RRA oper,X	77	2	6
absolute	RRA oper	6F	3	6
absolut,X	RRA oper,X	7F	3	7
absolut,Y	RRA oper,Y	7B	3	7
(indirect,X)	RRA (oper,X)	63	2	8
(indirect),Y	RRA (oper),Y	73	2	8

SAX (AXS, AAX)

A and X are put on the bus at the same time (resulting effectively in an AND operation) and stored in M

A AND X -> M

N Z C I D V
- - - - -

addressing	assembler	opc	bytes	cycles
zeropage	SAX oper	87	2	3
zeropage,Y	SAX oper,Y	97	2	4
absolute	SAX oper	8F	3	4
(indirect,X)	SAX (oper,X)	83	2	6

SBX (AXS, SAX)

CMP and DEX at once, sets flags like CMP

(A AND X) - oper -> X

N Z C I D V
+ + + - - -

addressing	assembler	opc	bytes	cycles
immediate	SBX #oper	CB	2	2

SHA (AHX, AXA)

Stores A AND X AND (high-byte of addr. + 1) at addr.

unstable: sometimes 'AND (H+1)' is dropped, page boundary crossings may not work (with the high-byte of the value used as the high-byte of the address)

A AND X AND (H+1) -> M

N Z C I D V
- - - - -

addressing	assembler	opc	bytes	cycles
absolut,Y	SHA oper,Y	9F	3	5 †
(indirect),Y	SHA (oper),Y	93	2	6 †

SHX (All, SXA, XAS)

Stores X AND (high-byte of addr. + 1) at addr.

unstable: sometimes 'AND (H+1)' is dropped, page boundary crossings may not work (with the high-byte of the value used as the high-byte of the address)

X AND (H+1) -> M

N Z C I D V
- - - - -

addressing	assembler	opc	bytes	cycles
absolut,Y	SHX oper,Y	9E	3	5 †

SHY (All, SYA, SAY)

Stores Y AND (high-byte of addr. + 1) at addr.

unstable: sometimes 'AND (H+1)' is dropped, page boundary crossings may not work (with the high-byte of the value used as the high-byte of the address)

Y AND (H+1) -> M

N Z C I D V
- - - - -

addressing	assembler	opc	bytes	cycles
absolut,X	SHY oper,X	9C	3	5 †

SLO (ASO)

ASL oper + ORA oper

M = C <- [76543210] <- 0, A OR M -> A

N Z C I D V
+ + + - - -

addressing	assembler	opc	bytes	cycles
zeropage	SLO oper	07	2	5

zeropage,X	SLO oper,X	17	2	6
absolute	SLO oper	0F	3	6
absolut,X	SLO oper,X	1F	3	7
absolut,Y	SLO oper,Y	1B	3	7
(indirect,X)	SLO (oper,X)	03	2	8
(indirect),Y	SLO (oper),Y	13	2	8

SRE (LSE)

LSR oper + EOR oper

M = 0 -> [76543210] -> C, A EOR M -> A

```

      N Z C I D V
      + + + - - -

```

addressing	assembler	opc	bytes	cycles
zeropage	SRE oper	47	2	5
zeropage,X	SRE oper,X	57	2	6
absolute	SRE oper	4F	3	6
absolut,X	SRE oper,X	5F	3	7
absolut,Y	SRE oper,Y	5B	3	7
(indirect,X)	SRE (oper,X)	43	2	8
(indirect),Y	SRE (oper),Y	53	2	8

TAS (XAS, SHS)

Puts A AND X in SP and stores A AND X AND (high-byte of addr. + 1) at addr.

unstable: sometimes 'AND (H+1)' is dropped, page boundary crossings may not work (with the high-byte of the value used as the high-byte of the address)

A AND X -> SP, A AND X AND (H+1) -> M

```

      N Z C I D V
      - - - - -

```

addressing	assembler	opc	bytes	cycles
absolut,Y	TAS oper,Y	9B	3	5 †

USBC (SBC)

SBC oper + NOP

effectively same as normal SBC immediate, instr. E9.

A - M - \bar{C} -> A

```

      N Z C I D V
      + + + - - +

```

addressing	assembler	opc	bytes	cycles
immediate	USBC #oper	EB	2	2

NOPs (including DOP, TOP)

Instructions effecting in 'no operations' in various address modes. Operands are ignored.

N Z C I D V
- - - - -

opc	addressing	bytes	cycles
1A	implied	1	2
3A	implied	1	2
5A	implied	1	2
7A	implied	1	2
DA	implied	1	2
FA	implied	1	2
80	immediate	2	2
82	immediate	2	2
89	immediate	2	2
C2	immediate	2	2
E2	immediate	2	2
04	zeropage	2	3
44	zeropage	2	3
64	zeropage	2	3
14	zeropage,X	2	4
34	zeropage,X	2	4
54	zeropage,X	2	4
74	zeropage,X	2	4
D4	zeropage,X	2	4
F4	zeropage,X	2	4
0C	absolute	3	4
1C	absolut,X	3	4*
3C	absolut,X	3	4*
5C	absolut,X	3	4*
7C	absolut,X	3	4*
DC	absolut,X	3	4*
FC	absolut,X	3	4*

JAM (KIL, HLT)

These instructions freeze the CPU.

The processor will be trapped infinitely in T1 phase with \$FF on the data bus. - Reset required.

Instruction codes: 02, 12, 22, 32, 42, 52, 62, 72, 92, B2, D2, F2

Have a look at this [table of the instruction layout](#) in order to see how most of these "illegal" instructions are a result of executing both instructions at c=1 and c=2 in a given slot (same column, rows immediately above) at once.

Where c is the lowest two bits of the instruction code. E.g., "SAX abs", instruction code \$8F, binary 10001111, is "STA abs", 10001101 (\$8D) and "STX abs", 10001110 (\$8E).

6502 Jump Vectors and Stack Operations

The 256 bytes processor stack of the 6502 is located at \$0100 ... \$01FF in memory, growing down from top to bottom.


There are three 2-byte address locations at the very top end of the 64K address space serving as jump vectors for reset/startup and interrupt operations:

\$FFFA, \$FFFB ... NMI (Non-Maskable Interrupt) vector

\$FFFC, \$FFFD ... RES (Reset) vector

\$FFFE, \$FFFF ... IRQ (Interrupt Request) vector


At the occurrence of interrupt, the value of the program counter (PC) is put in high-low order onto the stack, followed by the value currently in the status register and control will be transferred to the address location found in the respective interrupt vector. These are recovered from the stack at the end of an interrupt routine by the RTI instruction.

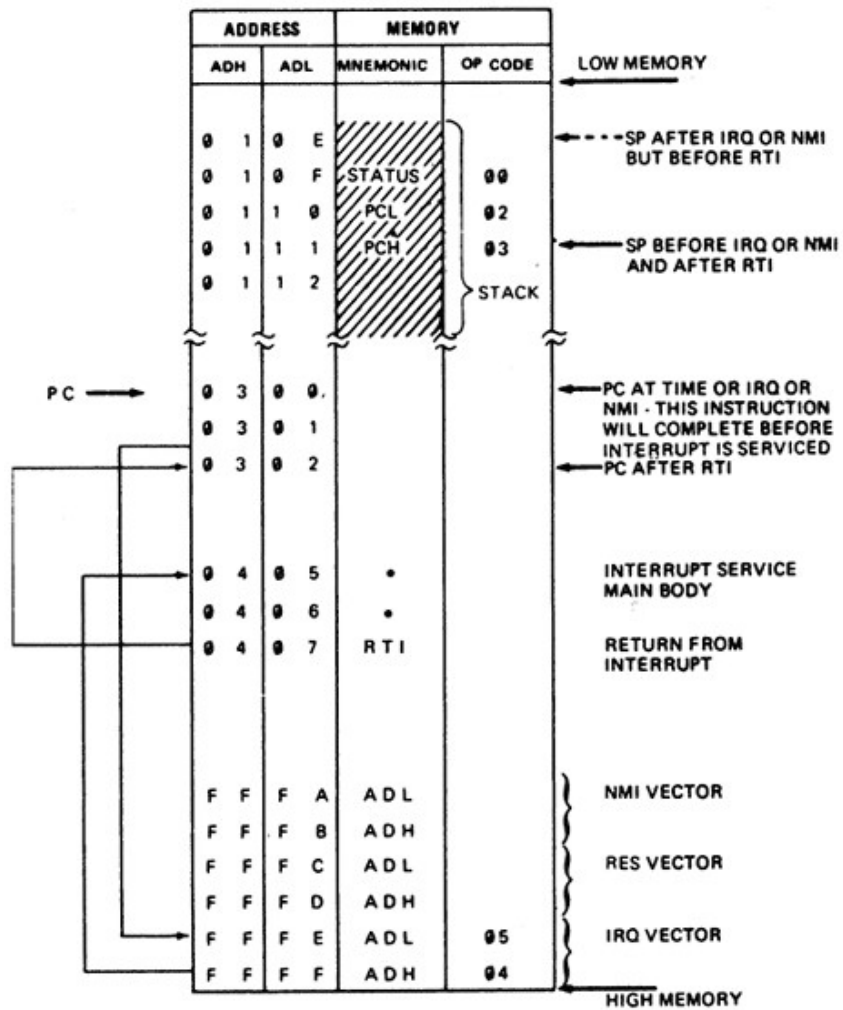

IRQ, NMI, RTI, BRK OPERATION

(Image: MCS6502 Instruction Set Summary, MOS Technology, Inc.)

Similarly, as a JSR instruction is encountered, PC is dumped onto the stack and recovered by the JSR instruction:

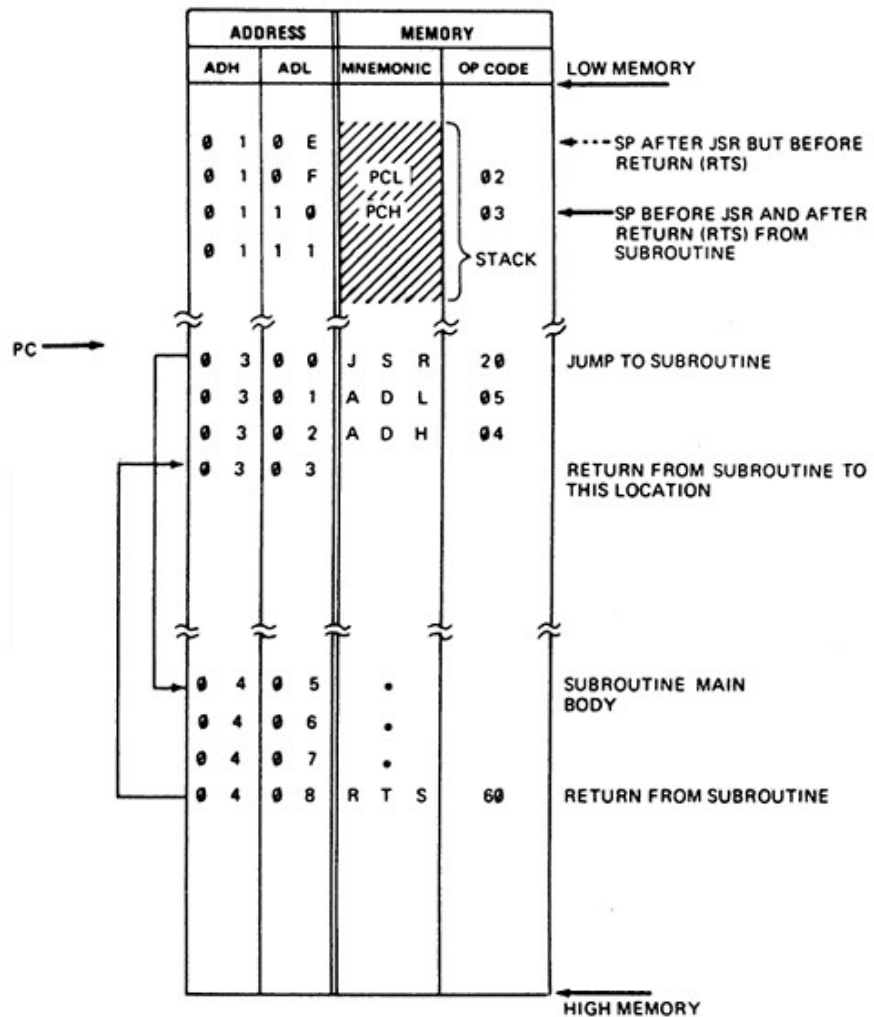

JSR, RTS OPERATION

(Image: MCS6502 Instruction Set Summary, MOS Technology, Inc.)

The Break Flag and the Stack

Interrupts and stack operations involving the status register (or P register) are the only instances, the break flag appears (namely on the stack). It has no representation in the CPU and can't be accessed by any instruction.

- The break flag will be set to on (1), whenever the transfer was caused by software (BRK or PHP).
- The break flag will be set to zero (0), whenever the transfer was caused by a hardware interrupt.
- The break flag will be masked and cleared (0), whenever transferred from the stack to the status register, either by PLP or during a return from interrupt (RTI).

Therefore, it's somewhat difficult to inspect the break flag in order to discern a software interrupt (BRK) from a hardware interrupt (NMI or IRQ) and the mechanism is seldom used. Accessing a break mark put in the extra byte following a BRK instruction is even more cumbersome and probably involves indexed zeropage operations.

Bit 5 (unused) of the status register will be set to 1, whenever the register is pushed to the stack. Bits 5 and 4 will always be ignored, when transferred to the status register.

E.g.,

1)

```
SR: N V - B D I Z C
    0 0 - - 0 0 1 1
```

```
PHP -> 0 0 1 1 0 0 1 1 = $33
```

```
PLP <- 0 0 - - 0 0 1 1 = $03
```

but:

```
PLA <- 0 0 1 1 0 0 1 1 = $33
```

2)

```
LDA #$32 ;00110010
```

```
PHA -> 0 0 1 1 0 0 1 0 = $32
```

```
PLP <- 0 0 - - 0 0 1 0 = $02
```

3)

```
LDA #$C0
```

```
PHA -> 1 1 0 0 0 0 0 0 = $C0
```

```
LDA #$08
```

```
PHA -> 0 0 0 0 1 0 0 0 = $08
```

```
LDA #$12
```

```
PHA -> 0 0 0 1 0 0 1 0 = $12
```

```
RTI
```


```
SR: 0 0 - - 0 0 1 0 = $02
```

PC: \$C008

Mind that most emulators are displaying the status register (SR or P) in the state as it would be currently pushed to the stack, with bits 4 and 5 on, adding a bias of \$30 to the register value. Here, we chose to rather omit this virtual presence of these bits, since there isn't really a slot for them in the hardware.

6502 Instruction Layout

The 6502 instruction table is laid out according to a pattern *a-b-c*, where *a* and *b* are an octal number each, followed by a group of two binary digits *c*, as in the bit-vector "*aaabbbcc*".



Example:

All ROR instructions share $a = 3$ and $c = 2$ ($3b2$) with the address mode in b . At the same time, all instructions addressing the zero-page share $b = 1$ ($a1c$). $abc = 312 \Rightarrow (3 \ll 5 \mid 1 \ll 2 \mid 2) = \%011.001.10 = \66 "ROR zpg".

Notably, there are no legal opcodes defined where $c = 3$, accounting for the empty columns in the usual, hexadecimal view of the instruction table. (For compactness empty rows where $c = 3$ are omitted from the tables below.)

The following table lists the instruction set, rows sorted by c , then a .

Generally, instructions of a kind are typically found in rows as a combination of a and c , and address modes are in columns b .

However, there are a few exception to this rule, namely, where bits 0 of both c and b are low ($c = 0, 2; b = 0, 2, 4, 6$) and combinations of c and b select a group of related operations. (E.g., $c=0 \wedge b=4$: branch, $c=0 \wedge b=6$: set flag)

c	a	b							
		0	1	2	3	4	5	6	7
0	0	\$00 BRK impl		\$08 PHP impl		\$10 BPL rel		\$18 CLC impl	
	1	\$20 JSR abs	\$24 BIT zpg	\$28 PLP impl	\$2C BIT abs	\$30 BMI rel		\$38 SEC impl	
	2	\$40 RTI impl		\$48 PHA impl	\$4C JMP abs	\$50 BVC rel		\$58 CLI impl	

c	a	b							
		0	1	2	3	4	5	6	7
1	3	\$60 RTS impl		\$68 PLA impl	\$6C JMP ind	\$70 BVS rel		\$78 SEI impl	
	4		\$84 STY zpg	\$88 DEY impl	\$8C STY abs	\$90 BCC rel	\$94 STY zpg,X	\$98 TYA impl	
	5	\$A0 LDY #	\$A4 LDY zpg	\$A8 TAY impl	\$AC LDY abs	\$B0 BCS rel	\$B4 LDY zpg,X	\$B8 CLV impl	\$BC LDY abs,X
	6	\$C0 CPY #	\$C4 CPY zpg	\$C8 INY impl	\$CC CPY abs	\$D0 BNE rel		\$D8 CLD impl	
	7	\$E0 CPX #	\$E4 CPX zpg	\$E8 INX impl	\$EC CPX abs	\$F0 BEQ rel		\$F8 SED impl	
	0	\$01 ORA X,ind	\$05 ORA zpg	\$09 ORA #	\$0D ORA abs	\$11 ORA ind,Y	\$15 ORA zpg,X	\$19 ORA abs,Y	\$1D ORA abs,X
	1	\$21 AND X,ind	\$25 AND zpg	\$29 AND #	\$2D AND abs	\$31 AND ind,Y	\$35 AND zpg,X	\$39 AND abs,Y	\$3D AND abs,X
2	\$41 EOR X,ind	\$45 EOR zpg	\$49 EOR #	\$4D EOR abs	\$51 EOR ind,Y	\$55 EOR zpg,X	\$59 EOR abs,Y	\$5D EOR abs,X	
3	\$61 ADC X,ind	\$65 ADC zpg	\$69 ADC #	\$6D ADC abs	\$71 ADC ind,Y	\$75 ADC zpg,X	\$79 ADC abs,Y	\$7D ADC abs,X	
4	\$81 STA X,ind	\$85 STA zpg		\$8D STA abs	\$91 STA ind,Y	\$95 STA zpg,X	\$99 STA abs,Y	\$9D STA abs,X	
5	\$A1 LDA X,ind	\$A5 LDA zpg	\$A9 LDA #	\$AD LDA abs	\$B1 LDA ind,Y	\$B5 LDA zpg,X	\$B9 LDA abs,Y	\$BD LDA abs,X	
6	\$C1 CMP X,ind	\$C5 CMP zpg	\$C9 CMP #	\$CD CMP abs	\$D1 CMP ind,Y	\$D5 CMP zpg,X	\$D9 CMP abs,Y	\$DD CMP abs,X	
7	\$E1 SBC X,ind	\$E5 SBC zpg	\$E9 SBC #	\$ED SBC abs	\$F1 SBC ind,Y	\$F5 SBC zpg,X	\$F9 SBC abs,Y	\$FD SBC abs,X	
2	0		\$06 ASL zpg	\$0A ASL A	\$0E ASL abs		\$16 ASL zpg,X		\$1E ASL abs,X
	1		\$26 ROL zpg	\$2A ROL A	\$2E ROL abs		\$36 ROL zpg,X		\$3E ROL abs,X
	2		\$46 LSR zpg	\$4A LSR A	\$4E LSR abs		\$56 LSR zpg,X		\$5E LSR abs,X
	3		\$66 ROR zpg	\$6A ROR A	\$6E ROR abs		\$76 ROR zpg,X		\$7E ROR abs,X
	4		\$86 STX zpg	\$8A TXA impl	\$8E STX abs		\$96 STX zpg,Y	\$9A TXS impl	
	5	\$A2 LDX #	\$A6 LDX zpg	\$AA TAX impl	\$AE LDX abs		\$B6 LDX zpg,Y	\$BA TSX impl	\$BE LDX abs,Y
	6		\$C6 DEC zpg	\$CA DEX impl	\$CE DEC abs		\$D6 DEC zpg,X		\$DE DEC abs,X
7		\$E6 INC zpg	\$EA NOP impl	\$EE INC abs		\$F6 INC zpg,X		\$FE INC abs,X	

Note: The operand of instructions like "ASL A" is often depicted as implied, as well. Mind that, for any practical reasons, the two notations are interchangeable for any instructions involving the accumulator. – However, there are subtle differences.

A rotated view, rows as combinations of c and b, and columns as a:

c	b	a							
		0	1	2	3	4	5	6	7
0	0	\$00 BRK impl	\$20 JSR abs	\$40 RTI impl	\$60 RTS impl		\$A0 LDY #	\$C0 CPY #	\$E0 CPX #
	1		\$24 BIT zpg			\$84 STY zpg	\$A4 LDY zpg	\$C4 CPY zpg	\$E4 CPX zpg
	2	\$08 PHP impl	\$28 PLP impl	\$48 PHA impl	\$68 PLA impl	\$88 DEY impl	\$A8 TAY impl	\$C8 INY impl	\$E8 INX impl
	3		\$2C BIT abs	\$4C JMP abs	\$6C JMP ind	\$8C STY abs	\$AC LDY abs	\$CC CPY abs	\$EC CPX abs
	4	\$10 BPL rel	\$30 BMI rel	\$50 BVC rel	\$70 BVS rel	\$90 BCC rel	\$B0 BCS rel	\$D0 BNE rel	\$F0 BEQ rel
	5					\$94 STY zpg,X	\$B4 LDY zpg,X		
	6	\$18 CLC impl	\$38 SEC impl	\$58 CLI impl	\$78 SEI impl	\$98 TYA impl	\$B8 CLV impl	\$D8 CLD impl	\$F8 SED impl
	7						\$BC LDY abs,X		
1	0	\$01 ORA X,ind	\$21 AND X,ind	\$41 EOR X,ind	\$61 ADC X,ind	\$81 STA X,ind	\$A1 LDA X,ind	\$C1 CMP X,ind	\$E1 SBC X,ind
	1	\$05 ORA zpg	\$25 AND zpg	\$45 EOR zpg	\$65 ADC zpg	\$85 STA zpg	\$A5 LDA zpg	\$C5 CMP zpg	\$E5 SBC zpg
	2	\$09 ORA #	\$29 AND #	\$49 EOR #	\$69 ADC #		\$A9 LDA #	\$C9 CMP #	\$E9 SBC #
	3	\$0D ORA abs	\$2D AND abs	\$4D EOR abs	\$6D ADC abs	\$8D STA abs	\$AD LDA abs	\$CD CMP abs	\$ED SBC abs
	4	\$11 ORA ind,Y	\$31 AND ind,Y	\$51 EOR ind,Y	\$71 ADC ind,Y	\$91 STA ind,Y	\$B1 LDA ind,Y	\$D1 CMP ind,Y	\$F1 SBC ind,Y
	5	\$15 ORA zpg,X	\$35 AND zpg,X	\$55 EOR zpg,X	\$75 ADC zpg,X	\$95 STA zpg,X	\$B5 LDA zpg,X	\$D5 CMP zpg,X	\$F5 SBC zpg,X
	6	\$19 ORA abs,Y	\$39 AND abs,Y	\$59 EOR abs,Y	\$79 ADC abs,Y	\$99 STA abs,Y	\$B9 LDA abs,Y	\$D9 CMP abs,Y	\$F9 SBC abs,Y
	7	\$1D ORA abs,X	\$3D AND abs,X	\$5D EOR abs,X	\$7D ADC abs,X	\$9D STA abs,X	\$BD LDA abs,X	\$DD CMP abs,X	\$FD SBC abs,X
2	0						\$A2 LDX #		
	1	\$06 ASL zpg	\$26 ROL zpg	\$46 LSR zpg	\$66 ROR zpg	\$86 STX zpg	\$A6 LDX zpg	\$C6 DEC zpg	\$E6 INC zpg
	2	\$0A ASL A	\$2A ROL A	\$4A LSR A	\$6A ROR A	\$8A TXA impl	\$AA TAX impl	\$CA DEX impl	\$EA NOP impl
	3	\$0E ASL abs	\$2E ROL abs	\$4E LSR abs	\$6E ROR abs	\$8E STX abs	\$AE LDX abs	\$CE DEC abs	\$EE INC abs
	4								
	5	\$16 ASL zpg,X	\$36 ROL zpg,X	\$56 LSR zpg,X	\$76 ROR zpg,X	\$96 STX zpg,Y	\$B6 LDX zpg,Y	\$D6 DEC zpg,X	\$F6 INC zpg,X
	6					\$9A TXS impl	\$BA TSX impl		
	7	\$1E ASL abs,X	\$3E ROL abs,X	\$5E LSR abs,X	\$7E ROR abs,X		\$BE LDX abs,Y	\$DE DEC abs,X	\$FE INC abs,X

Finally, a more complex view, the instruction set listed by rows as

combinations of *a* and *c*, and *b* in columns:

Address modes are either a property of *b* (even columns) or combinations of *b* and *c* (odd columns with a specific row-index modulus 3; i.e., every third row in a given column). In those latter columns, first and third rows (*c* = 0 and *c* = 2) refer to the same kind of general operation.

Load, store and transfer instructions as well as comparisons are typically found in the lower half of the table, while most of the arithmetical and logical operations as well as stack and jump instructions are found in the upper half. (However, mind the exception of SBC as a "mirror" of ADC.)

a	c	b							
		0	1	2	3	4	5	6	7
0	0	\$00 BRK impl		\$08 PHP impl		\$10 BPL rel		\$18 CLC impl	
	1	\$01 ORA X,ind	\$05 ORA zpg	\$09 ORA #	\$0D ORA abs	\$11 ORA ind,Y	\$15 ORA zpg,X	\$19 ORA abs,Y	\$1D ORA abs,X
	2		\$06 ASL zpg	\$0A ASL A	\$0E ASL abs		\$16 ASL zpg,X		\$1E ASL abs,X
1	0	\$20 JSR abs	\$24 BIT zpg	\$28 PLP impl	\$2C BIT abs	\$30 BMI rel		\$38 SEC impl	
	1	\$21 AND X,ind	\$25 AND zpg	\$29 AND #	\$2D AND abs	\$31 AND ind,Y	\$35 AND zpg,X	\$39 AND abs,Y	\$3D AND abs,X
	2		\$26 ROL zpg	\$2A ROL A	\$2E ROL abs		\$36 ROL zpg,X		\$3E ROL abs,X
2	0	\$40 RTI impl		\$48 PHA impl	\$4C JMP abs	\$50 BVC rel		\$58 CLI impl	
	1	\$41 EOR X,ind	\$45 EOR zpg	\$49 EOR #	\$4D EOR abs	\$51 EOR ind,Y	\$55 EOR zpg,X	\$59 EOR abs,Y	\$5D EOR abs,X
	2		\$46 LSR zpg	\$4A LSR A	\$4E LSR abs		\$56 LSR zpg,X		\$5E LSR abs,X
3	0	\$60 RTS impl		\$68 PLA impl	\$6C JMP ind	\$70 BVS rel		\$78 SEI impl	
	1	\$61 ADC X,ind	\$65 ADC zpg	\$69 ADC #	\$6D ADC abs	\$71 ADC ind,Y	\$75 ADC zpg,X	\$79 ADC abs,Y	\$7D ADC abs,X
	2		\$66 ROR zpg	\$6A ROR A	\$6E ROR abs		\$76 ROR zpg,X		\$7E ROR abs,X
4	0		\$84 STY zpg	\$88 DEY impl	\$8C STY abs	\$90 BCC rel	\$94 STY zpg,X	\$98 TYA impl	
	1	\$81 STA X,ind	\$85 STA zpg		\$8D STA abs	\$91 STA ind,Y	\$95 STA zpg,X	\$99 STA abs,Y	\$9D STA abs,X
	2		\$86 STX zpg	\$8A TXA impl	\$8E STX abs		\$96 STX zpg,Y	\$9A TXS impl	
5	0	\$A0 LDY #	\$A4 LDY zpg	\$A8 TAY impl	\$AC LDY abs	\$B0 BCS rel	\$B4 LDY zpg,X	\$B8 CLV impl	\$BC LDY abs,X
	1	\$A1 LDA X,ind	\$A5 LDA zpg	\$A9 LDA #	\$AD LDA abs	\$B1 LDA ind,Y	\$B5 LDA zpg,X	\$B9 LDA abs,Y	\$BD LDA abs,X
	2	\$A2 LDX #	\$A6 LDX zpg	\$AA TAX impl	\$AE LDX abs		\$B6 LDX zpg,Y	\$BA TSX impl	\$BE LDX abs,Y

a		c		b						
				0	1	2	3	4	5	6
6	0	\$C0 CPY #	\$C4 CPY zpg	\$C8 INY impl	\$CC CPY abs	\$D0 BNE rel		\$D8 CLD impl		
	1	\$C1 CMP X, ind	\$C5 CMP zpg	\$C9 CMP #	\$CD CMP abs	\$D1 CMP ind, Y	\$D5 CMP zpg, X	\$D9 CMP abs, Y	\$DD CMP abs, X	
	2		\$C6 DEC zpg	\$CA DEX impl	\$CE DEC abs		\$D6 DEC zpg, X		\$DE DEC abs, X	
7	0	\$E0 CPX #	\$E4 CPX zpg	\$E8 INX impl	\$EC CPX abs	\$F0 BEQ rel		\$F8 SED impl		
	1	\$E1 SBC X, ind	\$E5 SBC zpg	\$E9 SBC #	\$ED SBC abs	\$F1 SBC ind, Y	\$F5 SBC zpg, X	\$F9 SBC abs, Y	\$FD SBC abs, X	
	2		\$E6 INC zpg	\$EA NOP impl	\$EE INC abs		\$F6 INC zpg, X		\$FE INC abs, X	

"Illegal" Opcodes Revisited

So, how do the "illegal" opcodes fit into this decoding scheme?

Let's have a look – "illegals" are shown on grey background.

The first view – rows by *c* and *a* and columns as *b* – reveals a strict relation between address modes and columns:

c		a		b						
				0	1	2	3	4	5	6
0	0	\$00 BRK impl	\$04 NOP zpg	\$08 PHP impl	\$0C NOP abs	\$10 BPL rel	\$14 NOP zpg, X	\$18 CLC impl	\$1C NOP abs, X	
	1	\$20 JSR abs	\$24 BIT zpg	\$28 PLP impl	\$2C BIT abs	\$30 BMI rel	\$34 NOP zpg, X	\$38 SEC impl	\$3C NOP abs, X	
	2	\$40 RTI impl	\$44 NOP zpg	\$48 PHA impl	\$4C JMP abs	\$50 BVC rel	\$54 NOP zpg, X	\$58 CLI impl	\$5C NOP abs, X	
	3	\$60 RTS impl	\$64 NOP zpg	\$68 PLA impl	\$6C JMP ind	\$70 BVS rel	\$74 NOP zpg, X	\$78 SEI impl	\$7C NOP abs, X	
	4	\$80 NOP #	\$84 STY zpg	\$88 DEY impl	\$8C STY abs	\$90 BCC rel	\$94 STY zpg, X	\$98 TYA impl	\$9C SHY abs, X	
	5	\$A0 LDY #	\$A4 LDY zpg	\$A8 TAY impl	\$AC LDY abs	\$B0 BCS rel	\$B4 LDY zpg, X	\$B8 CLV impl	\$BC LDY abs, X	
	6	\$C0 CPY #	\$C4 CPY zpg	\$C8 INY impl	\$CC CPY abs	\$D0 BNE rel	\$D4 NOP zpg, X	\$D8 CLD impl	\$DC NOP abs, X	
	7	\$E0 CPX #	\$E4 CPX zpg	\$E8 INX impl	\$EC CPX abs	\$F0 BEQ rel	\$F4 NOP zpg, X	\$F8 SED impl	\$FC NOP abs, X	
1	0	\$01 ORA X, ind	\$05 ORA zpg	\$09 ORA #	\$0D ORA abs	\$11 ORA ind, Y	\$15 ORA zpg, X	\$19 ORA abs, Y	\$1D ORA abs, X	
	1	\$21 AND X, ind	\$25 AND zpg	\$29 AND #	\$2D AND abs	\$31 AND ind, Y	\$35 AND zpg, X	\$39 AND abs, Y	\$3D AND abs, X	
	2	\$41 EOR X, ind	\$45 EOR zpg	\$49 EOR #	\$4D EOR abs	\$51 EOR ind, Y	\$55 EOR zpg, X	\$59 EOR abs, Y	\$5D EOR abs, X	

c	a	b							
		0	1	2	3	4	5	6	7
1	3	\$61 ADC X, ind	\$65 ADC zpg	\$69 ADC #	\$6D ADC abs	\$71 ADC ind, Y	\$75 ADC zpg, X	\$79 ADC abs, Y	\$7D ADC abs, X
	4	\$81 STA X, ind	\$85 STA zpg	\$89 NOP #	\$8D STA abs	\$91 STA ind, Y	\$95 STA zpg, X	\$99 STA abs, Y	\$9D STA abs, X
	5	\$A1 LDA X, ind	\$A5 LDA zpg	\$A9 LDA #	\$AD LDA abs	\$B1 LDA ind, Y	\$B5 LDA zpg, X	\$B9 LDA abs, Y	\$BD LDA abs, X
	6	\$C1 CMP X, ind	\$C5 CMP zpg	\$C9 CMP #	\$CD CMP abs	\$D1 CMP ind, Y	\$D5 CMP zpg, X	\$D9 CMP abs, Y	\$DD CMP abs, X
	7	\$E1 SBC X, ind	\$E5 SBC zpg	\$E9 SBC #	\$ED SBC abs	\$F1 SBC ind, Y	\$F5 SBC zpg, X	\$F9 SBC abs, Y	\$FD SBC abs, X
2	0	\$02 JAM	\$06 ASL zpg	\$0A ASL A	\$0E ASL abs	\$12 JAM	\$16 ASL zpg, X	\$1A NOP impl	\$1E ASL abs, X
	1	\$22 JAM	\$26 ROL zpg	\$2A ROL A	\$2E ROL abs	\$32 JAM	\$36 ROL zpg, X	\$3A NOP impl	\$3E ROL abs, X
	2	\$42 JAM	\$46 LSR zpg	\$4A LSR A	\$4E LSR abs	\$52 JAM	\$56 LSR zpg, X	\$5A NOP impl	\$5E LSR abs, X
	3	\$62 JAM	\$66 ROR zpg	\$6A ROR A	\$6E ROR abs	\$72 JAM	\$76 ROR zpg, X	\$7A NOP impl	\$7E ROR abs, X
	4	\$82 NOP #	\$86 STX zpg	\$8A TXA impl	\$8E STX abs	\$92 JAM	\$96 STX zpg, Y	\$9A TXS impl	\$9E SHX abs, Y
	5	\$A2 LDX #	\$A6 LDX zpg	\$AA TAX impl	\$AE LDX abs	\$B2 JAM	\$B6 LDX zpg, Y	\$BA TSX impl	\$BE LDX abs, Y
	6	\$C2 NOP #	\$C6 DEC zpg	\$CA DEX impl	\$CE DEC abs	\$D2 JAM	\$D6 DEC zpg, X	\$DA NOP impl	\$DE DEC abs, X
	7	\$E2 NOP #	\$E6 INC zpg	\$EA NOP impl	\$EE INC abs	\$F2 JAM	\$F6 INC zpg, X	\$FA NOP impl	\$FE INC abs, X
3	0	\$03 SLO X, ind	\$07 SLO zpg	\$0B ANC #	\$0F SLO abs	\$13 SLO ind, Y	\$17 SLO zpg, X	\$1B SLO abs, Y	\$1F SLO abs, X
	1	\$23 RLA X, ind	\$27 RLA zpg	\$2B ANC #	\$2F RLA abs	\$33 RLA ind, Y	\$37 RLA zpg, X	\$3B RLA abs, Y	\$3F RLA abs, X
	2	\$43 SRE X, ind	\$47 SRE zpg	\$4B ALR #	\$4F SRE abs	\$53 SRE ind, Y	\$57 SRE zpg, X	\$5B SRE abs, Y	\$5F SRE abs, X
	3	\$63 RRA X, ind	\$67 RRA zpg	\$6B ARR #	\$6F RRA abs	\$73 RRA ind, Y	\$77 RRA zpg, X	\$7B RRA abs, Y	\$7F RRA abs, X
	4	\$83 SAX X, ind	\$87 SAX zpg	\$8B ANE #	\$8F SAX abs	\$93 SHA ind, Y	\$97 SAX zpg, Y	\$9B TAS abs, Y	\$9F SHA abs, Y
	5	\$A3 LAX X, ind	\$A7 LAX zpg	\$AB LX A #	\$AF LAX abs	\$B3 LAX ind, Y	\$B7 LAX zpg, Y	\$BB LAS abs, Y	\$BF LAX abs, Y
	6	\$C3 DCP X, ind	\$C7 DCP zpg	\$CB SBX #	\$CF DCP abs	\$D3 DCP ind, Y	\$D7 DCP zpg, X	\$DB DCP abs, Y	\$DF DCP abs, X
	7	\$E3 ISC X, ind	\$E7 ISC zpg	\$EB USBC #	\$EF ISC abs	\$F3 ISC ind, Y	\$F7 ISC zpg, X	\$FB ISC abs, Y	\$FF ISC abs, X

And, again, as a rotated view, rows as combinations of c and b, and columns as a.

We may observe a close relationship between the legal and the undocumented instructions in the vertical (quarter-)segments of each column.

c	b	a							
		0	1	2	3	4	5	6	7
0	0	\$00 BRK impl	\$20 JSR abs	\$40 RTI impl	\$60 RTS impl	\$80 NOP #	\$A0 LDY #	\$C0 CPY #	\$E0 CPX #
	1	\$04 NOP zpg	\$24 BIT zpg	\$44 NOP zpg	\$64 NOP zpg	\$84 STY zpg	\$A4 LDY zpg	\$C4 CPY zpg	\$E4 CPX zpg
	2	\$08 PHP impl	\$28 PLP impl	\$48 PHA impl	\$68 PLA impl	\$88 DEY impl	\$A8 TAY impl	\$C8 INY impl	\$E8 INX impl
	3	\$0C NOP abs	\$2C BIT abs	\$4C JMP abs	\$6C JMP ind	\$8C STY abs	\$AC LDY abs	\$CC CPY abs	\$EC CPX abs
	4	\$10 BPL rel	\$30 BMI rel	\$50 BVC rel	\$70 BVS rel	\$90 BCC rel	\$B0 BCS rel	\$D0 BNE rel	\$F0 BEQ rel
	5	\$14 NOP zpg,X	\$34 NOP zpg,X	\$54 NOP zpg,X	\$74 NOP zpg,X	\$94 STY zpg,X	\$B4 LDY zpg,X	\$D4 NOP zpg,X	\$F4 NOP zpg,X
	6	\$18 CLC impl	\$38 SEC impl	\$58 CLI impl	\$78 SEI impl	\$98 TYA impl	\$B8 CLV impl	\$D8 CLD impl	\$F8 SED impl
	7	\$1C NOP abs,X	\$3C NOP abs,X	\$5C NOP abs,X	\$7C NOP abs,X	\$9C SHY abs,X	\$BC LDY abs,X	\$DC NOP abs,X	\$FC NOP abs,X
1	0	\$01 ORA X,ind	\$21 AND X,ind	\$41 EOR X,ind	\$61 ADC X,ind	\$81 STA X,ind	\$A1 LDA X,ind	\$C1 CMP X,ind	\$E1 SBC X,ind
	1	\$05 ORA zpg	\$25 AND zpg	\$45 EOR zpg	\$65 ADC zpg	\$85 STA zpg	\$A5 LDA zpg	\$C5 CMP zpg	\$E5 SBC zpg
	2	\$09 ORA #	\$29 AND #	\$49 EOR #	\$69 ADC #	\$89 NOP #	\$A9 LDA #	\$C9 CMP #	\$E9 SBC #
	3	\$0D ORA abs	\$2D AND abs	\$4D EOR abs	\$6D ADC abs	\$8D STA abs	\$AD LDA abs	\$CD CMP abs	\$ED SBC abs
	4	\$11 ORA ind,Y	\$31 AND ind,Y	\$51 EOR ind,Y	\$71 ADC ind,Y	\$91 STA ind,Y	\$B1 LDA ind,Y	\$D1 CMP ind,Y	\$F1 SBC ind,Y
	5	\$15 ORA zpg,X	\$35 AND zpg,X	\$55 EOR zpg,X	\$75 ADC zpg,X	\$95 STA zpg,X	\$B5 LDA zpg,X	\$D5 CMP zpg,X	\$F5 SBC zpg,X
	6	\$19 ORA abs,Y	\$39 AND abs,Y	\$59 EOR abs,Y	\$79 ADC abs,Y	\$99 STA abs,Y	\$B9 LDA abs,Y	\$D9 CMP abs,Y	\$F9 SBC abs,Y
	7	\$1D ORA abs,X	\$3D AND abs,X	\$5D EOR abs,X	\$7D ADC abs,X	\$9D STA abs,X	\$BD LDA abs,X	\$DD CMP abs,X	\$FD SBC abs,X
2	0	\$02 JAM	\$22 JAM	\$42 JAM	\$62 JAM	\$82 NOP #	\$A2 LDX #	\$C2 NOP #	\$E2 NOP #
	1	\$06 ASL zpg	\$26 ROL zpg	\$46 LSR zpg	\$66 ROR zpg	\$86 STX zpg	\$A6 LDX zpg	\$C6 DEC zpg	\$E6 INC zpg
	2	\$0A ASL A	\$2A ROL A	\$4A LSR A	\$6A ROR A	\$8A TXA impl	\$AA TAX impl	\$CA DEX impl	\$EA NOP impl
	3	\$0E ASL abs	\$2E ROL abs	\$4E LSR abs	\$6E ROR abs	\$8E STX abs	\$AE LDX abs	\$CE DEC abs	\$EE INC abs
	4	\$12 JAM	\$32 JAM	\$52 JAM	\$72 JAM	\$92 JAM	\$B2 JAM	\$D2 JAM	\$F2 JAM
	5	\$16 ASL zpg,X	\$36 ROL zpg,X	\$56 LSR zpg,X	\$76 ROR zpg,X	\$96 STX zpg,Y	\$B6 LDX zpg,Y	\$D6 DEC zpg,X	\$F6 INC zpg,X
	6	\$1A NOP impl	\$3A NOP impl	\$5A NOP impl	\$7A NOP impl	\$9A TXS impl	\$BA TSX impl	\$DA NOP impl	\$FA NOP impl
	7	\$1E ASL abs,X	\$3E ROL abs,X	\$5E LSR abs,X	\$7E ROR abs,X	\$9E SHX abs,Y	\$BE LDX abs,Y	\$DE DEC abs,X	\$FE INC abs,X

c	b	a									
		0	1	2	3	4	5	6	7		
3	0	\$03 SLO X,ind	\$23 RLA X,ind	\$43 SRE X,ind	\$63 RRA X,ind	\$83 SAX X,ind	\$A3 LAX X,ind	\$C3 DCP X,ind	\$E3 ISC X,ind		
	1	\$07 SLO zpg	\$27 RLA zpg	\$47 SRE zpg	\$67 RRA zpg	\$87 SAX zpg	\$A7 LAX zpg	\$C7 DCP zpg	\$E7 ISC zpg		
	2	\$0B ANC #	\$2B ANC #	\$4B ALR #	\$6B ARR #	\$8B ANE #	\$AB LXA #	\$CB SBX #	\$EB USBC #		
	3	\$0F SLO abs	\$2F RLA abs	\$4F SRE abs	\$6F RRA abs	\$8F SAX abs	\$AF LAX abs	\$CF DCP abs	\$EF ISC abs		
	4	\$13 SLO ind,Y	\$33 RLA ind,Y	\$53 SRE ind,Y	\$73 RRA ind,Y	\$93 SHA ind,Y	\$B3 LAX ind,Y	\$D3 DCP ind,Y	\$F3 ISC ind,Y		
	5	\$17 SLO zpg,X	\$37 RLA zpg,X	\$57 SRE zpg,X	\$77 RRA zpg,X	\$97 SAX zpg,Y	\$B7 LAX zpg,Y	\$D7 DCP zpg,X	\$F7 ISC zpg,X		
	6	\$1B SLO abs,Y	\$3B RLA abs,Y	\$5B SRE abs,Y	\$7B RRA abs,Y	\$9B TAS abs,Y	\$BB LAS abs,Y	\$DB DCP abs,Y	\$FB ISC abs,Y		
	7	\$1F SLO abs,X	\$3F RLA abs,X	\$5F SRE abs,X	\$7F RRA abs,X	\$9F SHA abs,Y	\$BF LAX abs,Y	\$DF DCP abs,X	\$FF ISC abs,X		

And, finally, in a third view, we may observe how each of the rows of "illegal" instructions at $c = 3$ inherits behavior from the two rows with $c = 1$ and $c = 2$ immediately above, combining the operations of these instructions with the address mode of the respective instruction at $c = 1$.

(Mind that in binary 3 is the combination of 2 and 1, bits 0 and 1 both set.)

We may further observe that additional NOPs result from non-effective or non-sensical combinations of operations and address modes, e.g., instr. \$89, which would be "STA #", storing the contents of the accumulator in the operand. Some other instructions, typically combinations involving indirect indexed addressing, fail over unresolved timing issues entirely, resulting in a "JAM".

(We me also observe that there is indeed a difference in accumulator mode – as in "OPC A" – and immediate addressing. E.g., \$6A, "ROR A", is a valid instruction, while instruction \$7A, "ROR implied", is a NOP.

We may also note how "ROR X,ind" at \$62 and "ROR ind,Y" at \$72 fail entirely and result in a JAM.)

a	c	b									
		0	1	2	3	4	5	6	7		
0	0	\$00 BRK impl	\$04 NOP zpg	\$08 PHP impl	\$0C NOP abs	\$10 BPL rel	\$14 NOP zpg,X	\$18 CLC impl	\$1C NOP abs,X		
	1	\$01 ORA X,ind	\$05 ORA zpg	\$09 ORA #	\$0D ORA abs	\$11 ORA ind,Y	\$15 ORA zpg,X	\$19 ORA abs,Y	\$1D ORA abs,X		
	2	\$02 JAM	\$06 ASL zpg	\$0A ASL A	\$0E ASL abs	\$12 JAM	\$16 ASL zpg,X	\$1A NOP impl	\$1E ASL abs,X		
	3	\$03 SLO X,ind	\$07 SLO zpg	\$0B ANC #	\$0F SLO abs	\$13 SLO ind,Y	\$17 SLO zpg,X	\$1B SLO abs,Y	\$1F SLO abs,X		

a	c	b							
		0	1	2	3	4	5	6	7
1	0	\$20 JSR abs	\$24 BIT zpg	\$28 PLP impl	\$2C BIT abs	\$30 BMI rel	\$34 NOP zpg,X	\$38 SEC impl	\$3C NOP abs,X
	1	\$21 AND X,ind	\$25 AND zpg	\$29 AND #	\$2D AND abs	\$31 AND ind,Y	\$35 AND zpg,X	\$39 AND abs,Y	\$3D AND abs,X
	2	\$22 JAM	\$26 ROL zpg	\$2A ROL A	\$2E ROL abs	\$32 JAM	\$36 ROL zpg,X	\$3A NOP impl	\$3E ROL abs,X
	3	\$23 RLA X,ind	\$27 RLA zpg	\$2B ANC #	\$2F RLA abs	\$33 RLA ind,Y	\$37 RLA zpg,X	\$3B RLA abs,Y	\$3F RLA abs,X
2	0	\$40 RTI impl	\$44 NOP zpg	\$48 PHA impl	\$4C JMP abs	\$50 BVC rel	\$54 NOP zpg,X	\$58 CLI impl	\$5C NOP abs,X
	1	\$41 EOR X,ind	\$45 EOR zpg	\$49 EOR #	\$4D EOR abs	\$51 EOR ind,Y	\$55 EOR zpg,X	\$59 EOR abs,Y	\$5D EOR abs,X
	2	\$42 JAM	\$46 LSR zpg	\$4A LSR A	\$4E LSR abs	\$52 JAM	\$56 LSR zpg,X	\$5A NOP impl	\$5E LSR abs,X
	3	\$43 SRE X,ind	\$47 SRE zpg	\$4B ALR #	\$4F SRE abs	\$53 SRE ind,Y	\$57 SRE zpg,X	\$5B SRE abs,Y	\$5F SRE abs,X
3	0	\$60 RTS impl	\$64 NOP zpg	\$68 PLA impl	\$6C JMP ind	\$70 BVS rel	\$74 NOP zpg,X	\$78 SEI impl	\$7C NOP abs,X
	1	\$61 ADC X,ind	\$65 ADC zpg	\$69 ADC #	\$6D ADC abs	\$71 ADC ind,Y	\$75 ADC zpg,X	\$79 ADC abs,Y	\$7D ADC abs,X
	2	\$62 JAM	\$66 ROR zpg	\$6A ROR A	\$6E ROR abs	\$72 JAM	\$76 ROR zpg,X	\$7A NOP impl	\$7E ROR abs,X
	3	\$63 RRA X,ind	\$67 RRA zpg	\$6B ARR #	\$6F RRA abs	\$73 RRA ind,Y	\$77 RRA zpg,X	\$7B RRA abs,Y	\$7F RRA abs,X
4	0	\$80 NOP #	\$84 STY zpg	\$88 DEY impl	\$8C STY abs	\$90 BCC rel	\$94 STY zpg,X	\$98 TYA impl	\$9C SHY abs,X
	1	\$81 STA X,ind	\$85 STA zpg	\$89 NOP #	\$8D STA abs	\$91 STA ind,Y	\$95 STA zpg,X	\$99 STA abs,Y	\$9D STA abs,X
	2	\$82 NOP #	\$86 STX zpg	\$8A TXA impl	\$8E STX abs	\$92 JAM	\$96 STX zpg,Y	\$9A TXS impl	\$9E SHX abs,Y
	3	\$83 SAX X,ind	\$87 SAX zpg	\$8B ANE #	\$8F SAX abs	\$93 SHA ind,Y	\$97 SAX zpg,Y	\$9B TAS abs,Y	\$9F SHA abs,Y
5	0	\$A0 LDY #	\$A4 LDY zpg	\$A8 TAY impl	\$AC LDY abs	\$B0 BCS rel	\$B4 LDY zpg,X	\$B8 CLV impl	\$BC LDY abs,X
	1	\$A1 LDA X,ind	\$A5 LDA zpg	\$A9 LDA #	\$AD LDA abs	\$B1 LDA ind,Y	\$B5 LDA zpg,X	\$B9 LDA abs,Y	\$BD LDA abs,X
	2	\$A2 LDX #	\$A6 LDX zpg	\$AA TAX impl	\$AE LDX abs	\$B2 JAM	\$B6 LDX zpg,Y	\$BA TSX impl	\$BE LDX abs,Y
	3	\$A3 LAX X,ind	\$A7 LAX zpg	\$AB LXA #	\$AF LAX abs	\$B3 LAX ind,Y	\$B7 LAX zpg,Y	\$BB LAS abs,Y	\$BF LAX abs,Y
6	0	\$C0 CPY #	\$C4 CPY zpg	\$C8 INY impl	\$CC CPY abs	\$D0 BNE rel	\$D4 NOP zpg,X	\$D8 CLD impl	\$DC NOP abs,X
	1	\$C1 CMP X,ind	\$C5 CMP zpg	\$C9 CMP #	\$CD CMP abs	\$D1 CMP ind,Y	\$D5 CMP zpg,X	\$D9 CMP abs,Y	\$DD CMP abs,X
	2	\$C2 NOP #	\$C6 DEC zpg	\$CA DEX impl	\$CE DEC abs	\$D2 JAM	\$D6 DEC zpg,X	\$DA NOP impl	\$DE DEC abs,X
	3	\$C3 DCP X,ind	\$C7 DCP zpg	\$CB SBX #	\$CF DCP abs	\$D3 DCP ind,Y	\$D7 DCP zpg,X	\$DB DCP abs,Y	\$DF DCP abs,X

a	c	b							
		0	1	2	3	4	5	6	7
7	0	\$E0 CPX #	\$E4 CPX zpg	\$E8 INX impl	\$EC CPX abs	\$F0 BEQ rel	\$F4 NOP zpg,X	\$F8 SED impl	\$FC NOP abs,X
	1	\$E1 SBC X,ind	\$E5 SBC zpg	\$E9 SBC #	\$ED SBC abs	\$F1 SBC ind,Y	\$F5 SBC zpg,X	\$F9 SBC abs,Y	\$FD SBC abs,X
	2	\$E2 NOP #	\$E6 INC zpg	\$EA NOP impl	\$EE INC abs	\$F2 JAM	\$F6 INC zpg,X	\$FA NOP impl	\$FE INC abs,X
	3	\$E3 ISC X,ind	\$E7 ISC zpg	\$EB USBC #	\$EF ISC abs	\$F3 ISC ind,Y	\$F7 ISC zpg,X	\$FB ISC abs,Y	\$FF ISC abs,X

As a final observation, the two highly unstable instructions "ANE" (XAA) and "LXA" (LAX immediate) involving a "magic constant" are both combinations of an accumulator operation and an inter-register transfer between the accumulator and the X register:

```
$8B (a=5, c=3, b=2): ANE # = STA # (NOP) + TXA
(A OR CONST) AND X AND oper -> A
```

```
$AB (a=4, c=3, b=2): LXA # = LDA # + TAX
(A OR CONST) AND oper -> A -> X
```

In the case of ANE, the contents of the accumulator is put on the internal data lines at the same time as the contents of the X-register, while there's also the operand read for the immediate operation, with the result transferred to the accumulator.

In the case of LXA, the immediate operand and the contents of the accumulator are competing for the input lines, while the result will be transferred to both the accumulator and the X register.

The outcome of these competing, noisy conditions depends on the production series of the chip, and maybe even on environmental conditions. This effects in an OR-ing of the accumulator with the "magic constant" combined with an AND-ing of the competing inputs. The final transfer to the target register(s) then seems to work as may be expected.

(This AND-ing of competing values suggests that the 6502 is working internally in active negative logic, where all data lines are first set to high and then cleared for any zero bits. This also suggests that the "magic constant" stands merely for a partial transfer of the contents of the accumulator.)

Much of this also applies to "TAS" (XAS, SHS), \$9B, but here the extra cycles for indexed addressing seem to contribute to the conflict being resolved without this "magic constant". However, TAS is still unstable.

Similarly the peculiar group involving the high-byte of the provided address + 1

(as in "H+1") – SHA (AHX, AXA), SHX (A11, SXA, XAS), SHY (A11, SYA, SAY) – involves a conflict of an attempt to store the accumulator and another register being put on the data lines at the same time, and the operations required to determine the target address for indexed addressing. Again, the competing values are AND-ed and the instructions are unstable.

We may also observe that SHY is really the unimplemented instruction "STY abs,X" and SHX is "STX abs,Y" with SHA being the combination of "LDA abs,X" and SHX.

We may conclude that these "illegal opcodes" or "undocumented instructions" are really a text-book example of undefined behavior for undefined input patterns. Generally speaking, for any instructions `xxxxxx11` ($c=3$) both instructions at `xxxxxx01` ($c=1$) and `xxxxxx10` ($c=2$) are started in a thread, with competing output values on the internal data lines AND-ed. For some combinations, this results in a fragile race condition, while others are showing mostly stable behavior. The addressing mode is generally determined by that of the instruction at $c=1$.

(It may be interesting that it doesn't matter, if any of the two threads jams, as long as the timing for the other thread resolves. So there is no "JAM" instruction at $c=3$.)

The 65xx-Family:

Type	Features, Comments
6502	NMOS, 16 bit address bus, 8 bit data bus
6502A	accelerated version of 6502
6502C	accelerated version of 6502, additional halt pin, CMOS
65C02	16 bit version, additional instructions and address modes
6503, 6505, 6506	12 bit address bus [4 KiB]
6504	13 bit address bus [8 KiB]
6507	13 bit address bus [8 KiB], no interrupts
6509	20 bit address bus [1 MiB] by bankswitching
6510	as 6502 with additional 6 bit I/O-port
6511	integrated micro controller with I/O-port, serial interface, and RAM (Rockwell)
65F11	as 6511, integrated FORTH interpreter
7501	as 6502, HMOS
8500	as 6510, CMOS
8502	as 6510 with switchable 2 MHz option, 7 bit I/O-port
65816 (65C816)	16 bit registers and ALU, 24 bit address bus [16 MiB], up to 24 MHz (Western Design Center)
65802 (65C802)	as 65816, pin compatible to 6502, 64 KiB address bus, up to 16 MHz

Site Notes

Disclaimer

Errors excepted. The information is provided for free and AS IS, therefore without any warranty; without even the implied warranty of merchantability or fitness for a particular purpose.

See also

>> [Virtual 6502](#) (6502/6510 emulator)

>> [6502 Assembler](#)

>> [6502 Disassembler](#)

External Links

>> [6502.org](#) – the 6502 microprocessor resource

>> [visual6502.org](#) – visual transistor-level simulation of the 6502 CPU

>> [The Western Design Center, Inc.](#) – designers of the 6502 (still thriving)

Presented by [virtual 6502](#), [mass:werk](#).